

KEY FOB PROGRAMMING INSTRUCTIONS - 10246215

FOR AUTOMOBILES:

These vehicles can be programmed using the instructions below:

- 1997-1999 Buick Century
- 1997-1999 Buick Regal
- 1998-2000 Oldsmobile Intrigue
- 1997-2000 Pontiac Grand Prix

These vehicles require the use of a professional scan tool for programming (see your local GM dealer or ACDelco Professional Service Center):

- 2000 Buick Century
- 2000 Buick Regal

REQUIRED TOOLS:

- None

INSTRUCTIONS FOR 1997-1999 BUICK CENTURY, 1997-1999 BUICK REGAL, AND 1998-2000 OLDSMOBILE INTRIGUE

NOTE: In the event that a transmitter is lost, program the old and the new transmitters into the memory of the remote control door lock receiver. Up to 4 transmitters may be programmed.

⚠ IMPORTANT:

- ONCE ENTERING THIS PROCEDURE, PROGRAMMING THE FIRST TRANSMITTER ERASES ALL PREVIOUS TRANSMITTERS. YOU MUST PROGRAM ALL TRANSMITTERS.
- PROGRAM ONE VEHICLE AT A TIME. ONE TRANSMITTER COULD BE PROGRAMMED INTO OTHER VEHICLES THAT ARE ALSO ON PROGRAM MODE IN CLOSE PROXIMITY.

PROGRAMMING INSTRUCTIONS:

1. Sit in the driver's seat.
2. Remove the ignition key from the ignition lock cylinder.
3. Close all vehicle doors.
4. Press and hold "unlock" on the door lock switch.
5. While holding the door lock switch in the unlock position, insert and remove the ignition key twice. Do not rotate the ignition lock cylinder.
6. Insert the ignition key a third time, leaving the key in the ignition lock cylinder. The ignition must remain in the LOCK position for the rest of the procedure.
7. Release the door lock switch. You will hear three chimes. This chime feedback indicates that transmitter programming is active.
8. Press and hold the lock and unlock buttons at the same time on the keyless entry transmitter for 12 seconds. You will hear two chimes. This chime feedback indicates that the transmitter has been programmed successfully.
9. Repeat step 8 for the rest of the transmitters (for a total of 4 transmitters).

10. Exit this procedure by removing the ignition key from the ignition lock cylinder.

1997-2000 PONTIAC GRAND PRIX:

In the event that a transmitter is lost, program the old and the new transmitters into the memory of the remote control door lock receiver. Up to 4 transmitters may be programmed.

⚠ IMPORTANT: ONCE THE KEYLESS ENTRY RECEIVER ENTERS THE PROGRAMMING/DIAGNOSTIC MODE, THE PROGRAMMING OF THE FIRST TRANSMITTER ERASES ALL PREVIOUS TRANSMITTER PROGRAMMING INFORMATION. YOU MUST THEN PROGRAM ALL OF THE TRANSMITTERS.

Program only 1 vehicle remote control door lock receiver at a time. If you program multiple receivers simultaneously, the same transmitter could possibly be programmed to more than 1 remote control door lock receiver.

Perform the following steps:

1. Sit in the driver's seat.
2. Remove the ignition key from the ignition lock cylinder.
3. Close all of the vehicle's doors.
4. Remove the MALL PGM fuse from the fuse panel. (Refer to "Instrument Panel Fuse Block" in your Owner's Manual for the location of your fuse block and the Fuse Usage Chart.)
5. Turn the ignition lock cylinder to the ACC position.
6. Turn the ignition lock cylinder OFF, then back to ACC within 1 second.
7. Open and then close any vehicle door. You will hear a chime when the remote control door lock receiver enters the programming/diagnostic mode. If you do not hear a chime, start again at step 1.

⚠ IMPORTANT: AFTER 7 SECONDS, YOU MAY HEAR A CHIME CONFIRMING SUCCESSFUL SYNCHRONIZATION. AFTER APPROXIMATELY 14 SECONDS, YOU WILL HEAR A CHIME CONFIRMING SUCCESSFUL PROGRAMMING.

8. Press and hold the transmitter LOCK and UNLOCK buttons simultaneously for 14 seconds.
9. Repeat step 8 in order to program each additional transmitter.
10. Remove the ignition key from the ignition lock cylinder.
11. Install the MALL PGM fuse back into the fuse panel.