

KEY FOB PROGRAMMING INSTRUCTIONS - 15732803, 15732805

FOR AUTOMOBILES:

15732803

- 1998-2001 Chevrolet S10
- 1999-2001 Chevrolet Silverado 1500
- 2001 Chevrolet Silverado 1500 HD
- 1999-2001 Chevrolet Silverado 2500
- 2001 Chevrolet Silverado 2500 HD
- 2001 Chevrolet Silverado 3500
- 2000-2001 Chevrolet Suburban 1500
- 2000-2001 Chevrolet Suburban 2500
- 2000-2001 Chevrolet Tahoe
- 1999-2001 GMC Sierra 1500
- 2001 GMC Sierra 1500 HD
- 1999-2001 GMC Sierra 2500
- 2001 GMC Sierra 2500 HD

- 2001 GMC Sierra 3500
- 2001 GMC Sierra C3
- 1998-2001 GMC Sonoma
- 2000-2001 GMC Yukon
- 2000-2001 GMC Yukon XL 1500
- 2000-2001 GMC Yukon XL 2500

15732805

- 2000-2001 Chevrolet Astro
- 1998-2001 Chevrolet Blazer
- 1998-2001 GMC Jimmy
- 2000-2001 GMC Safari
- 1998-2001 Oldsmobile Bravada

REQUIRED TOOLS:

- None

BEFORE YOU BEGIN:

1. Close all the vehicle doors.

PROGRAMMING INSTRUCTIONS:

1. Insert the ignition key into the ignition lock cylinder.
2. Press and hold the door unlock switch.
3. While holding the door lock switch in the unlock position, cycle the ignition ON, OFF, ON, OFF.
4. Release the door unlock switch. The doors will lock and unlock to confirm the program mode.
5. Press and hold the LOCK button and the UNLOCK button simultaneously on one transmitter. After a delay of approximately 15 seconds, the doors will lock and unlock to confirm the programming of that transmitter.
6. Repeat the previous step to program up to four transmitters.
7. Turn the ignition switch to the RUN position in order to exit the keyless entry transmitter mode.
8. Operate the transmitter functions in order to verify correct system operation.