



FEL-PRO INSTALLATION TIPS

INTAKE MANIFOLD GASKET

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

RESTRICTED PORT GASKET:

ATTACH AND ALIGN SEALS.

IMPORTANT: These molded rubber silicone seals must be installed DRY without any chemical adhesive.

ATTACH AND ALIGN GASKET(S).

PRIOR TO INSTALLING INTAKE MANIFOLD apply a small dab of RTV Black silicone sealer where all gaskets and seals meet.

Never apply RTV completely across gaskets or seals.

REINSTALL INTAKE MANIFOLD TO ENGINE. Torque securely to OEM specifications.



FEL-PRO INSTALLATION TIPS

INTAKE MANIFOLD GASKET

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

RESTRICTED PORT GASKET:

ATTACH AND ALIGN SEALS.

IMPORTANT: These molded rubber silicone seals must be installed DRY without any chemical adhesive.

ATTACH AND ALIGN GASKET(S).

PRIOR TO INSTALLING INTAKE MANIFOLD apply a small dab of RTV Black silicone sealer where all gaskets and seals meet.

Never apply RTV completely across gaskets or seals.

REINSTALL INTAKE MANIFOLD TO ENGINE. Torque securely to OEM specifications.



FEL-PRO INSTALLATION TIPS

INTAKE MANIFOLD GASKET

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

RESTRICTED PORT GASKET:

ATTACH AND ALIGN SEALS.

IMPORTANT: These molded rubber silicone seals must be installed DRY without any chemical adhesive.

ATTACH AND ALIGN GASKET(S).

PRIOR TO INSTALLING INTAKE MANIFOLD apply a small dab of RTV Black silicone sealer where all gaskets and seals meet.

Never apply RTV completely across gaskets or seals.

REINSTALL INTAKE MANIFOLD TO ENGINE. Torque securely to OEM specifications.



FEL-PRO INSTALLATION TIPS

INTAKE MANIFOLD GASKET

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

RESTRICTED PORT GASKET:

ATTACH AND ALIGN SEALS.

IMPORTANT: These molded rubber silicone seals must be installed DRY without any chemical adhesive.

ATTACH AND ALIGN GASKET(S).

PRIOR TO INSTALLING INTAKE MANIFOLD apply a small dab of RTV Black silicone sealer where all gaskets and seals meet.

Never apply RTV completely across gaskets or seals.

REINSTALL INTAKE MANIFOLD TO ENGINE. Torque securely to OEM specifications.