

## **FEL-PRO INSTALLATION TIPS**

#### ROTATING SHAFT SEALS

**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

**IMPORTANT:** Do not install any seal without break-in lubricant protection.

© 2000 Fel-Pro Incorporated Form No. I-60 (Rev. 12/92)

Printed in U.S.A.



**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

© 2000 Fel-Pro Incorporated Form No. I-60 (Rev. 12/92)

Printed in U.S.A.



# **FEL-PRO INSTALLATION TIPS**

ROTATING SHAFT SEALS

**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

© 2000 Fel-Pro Incorporated Form No. I-60 (Rev. 12/92)

Printed in U.S.A.



### **FEL-PRO INSTALLATION TIPS** ROTATING SHAFT SEALS

**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

© 2000 Fel-Pro Incorporated Form No. I-60 (Rev. 12/92)

Printed in U.S.A.



#### **FEL-PRO INSTALLATION TIPS** ROTATING SHAFT SEALS

**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

© 2000 Fel-Pro Incorporated Form No. I-60 (Rev. 12/92)

Printed in U.S.A.



#### **FEL-PRO INSTALLATION TIPS** ROTATING SHAFT SEALS

**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

**FEL-PRO INSTALLATION TIPS** 

**IMPORTANT:** Rubber seals are properly in-

stalled when its largest raised sealing lip is

PRIOR TO INSTALLING THE ROTATING

SHAFT AND/OR SEAL apply a thin coat of

lubricant, such as grease, on the sealing

IMPORTANT: Do not install any seal

**ROTATING SHAFT SEALS** 

© 2000 Fel-Pro Incorporated Form No. I-60 (Rev. 12/92)

closest towards engine.

lip and shaft.

Printed in U.S.A.



#### **FEL-PRO INSTALLATION TIPS** ROTATING SHAFT SEALS

**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

© 2000 Fel-Pro Incorporated Form No. I-60 (Rev. 12/92)

Printed in U.S.A.



#### **FEL-PRO INSTALLATION TIPS** ROTATING SHAFT SEALS

**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

© 2000 Fel-Pro Incorporated Form No. I-60 (Rev. 12/92)

Printed in U.S.A.



#### **FEL-PRO INSTALLATION TIPS ROTATING SHAFT SEALS**

**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

without break-in lubricant protection. © 2000 Fel-Pro Incorporated Printed in U.S.A. Form No. I-60 (Rev. 12/92)



#### **FEL-PRO INSTALLATION TIPS ROTATING SHAFT SEALS**

**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

© 2000 Fel-Pro Incorporated Printed in U.S.A. Form No. I-60 (Rev. 12/92)



#### **FEL-PRO INSTALLATION TIPS ROTATING SHAFT SEALS**

**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

© 2000 Fel-Pro Incorporated Form No. I-60 (Rev. 12/92)

Printed in U.S.A.