

Install thermostat seal over the flange of the thermostat positioning the flange into the slot of the seal.

Align the air bleed valve of the thermostat with the notch in the thermostat housing and press the thermostat and its seal into position in the housing. This procedure insures that the thermostat is oriented properly to the thermostat housing.

© 2000 Fel-Pro Incorporated Printed in U.S.A. Form No. I-2011



Install thermostat seal over the flange of the thermostat positioning the flange into the slot of the seal.

Align the air bleed valve of the thermostat with the notch in the thermostat housing and press the thermostat and its seal into position in the housing. This procedure insures that the thermostat is oriented properly to the thermostat housing.

© 2000 Fel-Pro Incorporated Printed in U.S.A. Form No. I-2011



Install thermostat seal over the flange of the thermostat positioning the flange into the slot of the seal.

Align the air bleed valve of the thermostat with the notch in the thermostat housing and press the thermostat and its seal into position in the housing. This procedure insures that the thermostat is oriented properly to the thermostat housing.

© 2000 Fel-Pro Incorporated Printed in U.S.A. Form No. I-2011



Install thermostat seal over the flange of the thermostat positioning the flange into the slot of the seal.

Align the air bleed valve of the thermostat with the notch in the thermostat housing and press the thermostat and its seal into position in the housing. This procedure insures that the thermostat is oriented properly to the thermostat housing.

© 2000 Fel-Pro Incorporated Printed in U.S.A. Form No. I-2011

FEL-PRO INSTALLATION TIPS

THERMOSTAT SEAL

Install thermostat seal over the flange of the

thermostat positioning the flange into the slot

Align the air bleed valve of the thermostat

with the notch in the thermostat housing and

press the thermostat and its seal into posi-

tion in the housing. This procedure insures

that the thermostat is oriented properly to the

 
Printed in U.S.A.

of the seal.

thermostat housing.

Form No. I-2011

© 2000 Fel-Pro Incorporated



with the notch in the thermostat housing and press the thermostat and its seal into position in the housing. This procedure insures that the thermostat is oriented properly to the thermostat housing.

FEL-PRO INSTALLATION TIPS

THERMOSTAT SEAL

© 2000 Fel-Pro Incorporated Printed in U.S.A. Form No. I-2011



Install thermostat seal over the flange of the thermostat positioning the flange into the slot of the seal.

Align the air bleed valve of the thermostat with the notch in the thermostat housing and press the thermostat and its seal into position in the housing. This procedure insures that the thermostat is oriented properly to the thermostat housing.

© 2000 Fel-Pro Incorporated Printed in U.S.A. Form No. I-2011



Install thermostat seal over the flange of the thermostat positioning the flange into the slot of the seal.

Align the air bleed valve of the thermostat with the notch in the thermostat housing and press the thermostat and its seal into position in the housing. This procedure insures that the thermostat is oriented properly to the thermostat housing.

© 2000 Fel-Pro Incorporated Printed in U.S.A. Form No. I-2011



Install thermostat seal over the flange of the thermostat positioning the flange into the slot of the seal.

Align the air bleed valve of the thermostat with the notch in the thermostat housing and press the thermostat and its seal into position in the housing. This procedure insures that the thermostat is oriented properly to the thermostat housing.

© 2000 Fel-Pro Incorporated Printed in U.S.A. Form No. I-2011



Install thermostat seal over the flange of the thermostat positioning the flange into the slot of the seal.

Align the air bleed valve of the thermostat with the notch in the thermostat housing and press the thermostat and its seal into position in the housing. This procedure insures that the thermostat is oriented properly to the thermostat housing.

© 2000 Fel-Pro Incorporated Printed in U.S.A. Form No. I-2011



Install thermostat seal over the flange of the thermostat positioning the flange into the slot of the seal.

Align the air bleed valve of the thermostat with the notch in the thermostat housing and press the thermostat and its seal into position in the housing. This procedure insures that the thermostat is oriented properly to the thermostat housing.

© 2000 Fel-Pro Incorporated Printed in U.S.A. Form No. I-2011



Install thermostat seal over the flange of the thermostat positioning the flange into the slot of the seal.

Align the air bleed valve of the thermostat with the notch in the thermostat housing and press the thermostat and its seal into position in the housing. This procedure insures that the thermostat is oriented properly to the thermostat housing.

© 2000 Fel-Pro Incorporated Printed in U.S.A. Form No. I-2011