

INSTALLATION INSTRUCTIONS

In a Convention Distributor, the firing order follows the circular path of the rotor. In an EEC Distributor, however, upper and lower level electrodes fire alternately in a pattern that jumps from one side of the cap to the other. The numbers molded in the top of the O.E. Cap are spark plug wire/cylinder identification numbers only.

The spark plug wire/cylinder identification numbers are different for the 5.8L (351CID) engine as they are for the 4.2L, 5.L (255, 3302CID) engines. The diagram below shows the spark plug identification for each engine.

