
## SOLENOID INSTALLATION INSTRUCTIONS

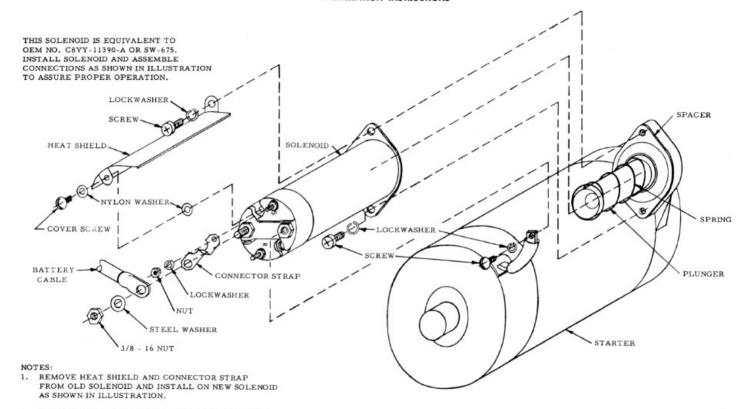

 IF THE ORIGINAL SOLENOID HAS THE "R" TERMINAL CONNECTED, RECONNECT SAME WIRE TO "R" TERMINAL ON REPLACEMENT SOLENOID.