

REPLACEMENT PICK-UP

To install the new PICK-UP, it is necessary to remove the old pick-up & plate assembly from the bottom plate inside the distributor housing. The bottom plate should be reused.

After the old pick-up & plate assembly has been removed, turn assembly upside down, depress retaining spring and slide it toward the center to separate the upper assembly from the bottom plate.

Hold the new PICK-UP ~~upside down and install bottom~~ plate over stud making sure bushings on bottom plate contact surface of upper plate. Align retaining spring over stud, depress and slide to lock it in position, making sure recess in retainer engages with boss on plate to prevent the retainer from turning.