

To prevent corrosion make sure terminals are clean. Puncture or cut tube and apply a coating of grease to terminals.

Printed in U.S.A. GF 6250

To prevent corrosion make sure terminals are clean. Puncture or cut tube and apply a coating of grease to terminals.

Printed in U.S.A. GF 6250

To prevent corrosion make sure terminals are clean. Puncture or cut tube and apply a coating of grease to terminals.

Printed in U.S.A. GF 6250

To prevent corrosion make sure terminals are clean. Puncture or cut tube and apply a coating of grease to terminals.

Printed in U.S.A. GF 6250

To prevent corrosion make sure terminals are clean. Puncture or cut tube and apply a coating of grease to terminals.

Printed in U.S.A. GF 6250

To prevent corrosion make sure terminals are clean. Puncture or cut tube and apply a coating of grease to terminals.

Printed in U.S.A. GF 6250

To prevent corrosion make sure terminals are clean. Puncture or cut tube and apply a coating of grease to terminals.

Printed in U.S.A. GF 6250

To prevent corrosion make sure terminals are clean. Puncture or cut tube and apply a coating of grease to terminals.

Printed in U.S.A. GF 6250

To prevent corrosion make sure terminals are clean. Puncture or cut tube and apply a coating of grease to terminals.

Printed in U.S.A. GF 6250