

# CARDONE™ ProTech®

Supporting Today's Vehicle Technician



## Angle Mounted Master Cylinder Bleeding Procedure

**Application** All angle-mounted master cylinders.


**Problem** Unable to obtain a firm brake pedal when bleeding master cylinder on vehicle

**Cause** Air trapped in the upper end of the master cylinder past the secondary port.


**Solution** When bleeding brakes system, raise rear of vehicle until master cylinder bore is level as shown below.

CAUTION: Some fluid should be removed from the reservoir to avoid spilling as vehicle is raised.

Air becomes trapped here

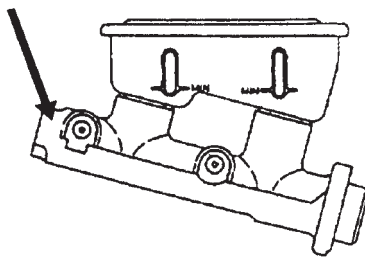

**Normal mounted master cylinder**

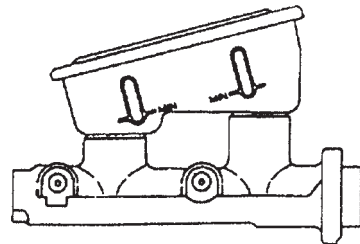

**Correct bleeding position**

**Note** Always flush entire brake system with approved fluid when any brake component is replaced.