


**Application:** All Front Wheel Drive Vehicles With CV Axles.

Problem: Inability to remove inner CV axle joint from transmission.

C-clip mis-shaped or rolled over upon installation. Cause:

**Solution:** Useful tips before installing axle into transmission:

- Use a small amount of light grease to help slide the splines and clip in.
- Orient the clip opening at 12:00 to prevent the ends from rolling over.
- Use a special compress tool where applicable.
- Do not use a hammer or force the axle into the transmission.

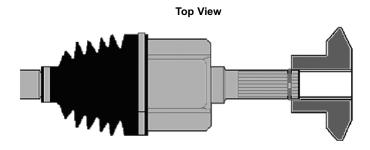

Note:

This bulletin is supplied as technical information only and is not an authorization for repair.

For other ProTech publications, visit www.cardone.com CARDONE Industries, Inc. • 5501 Whitaker Ave. • Philadelphia, PA 19124-1799

DSA7207 PT 60-0010