

MODULAR TRAILER WIRING SYSTEM

Many vehicles have a connector that joins the rear taillights together. This connector is usually located just behind the rear bumper.


1. Locate this connector (connectors vary in design based on make of vehicle).



2. Unplug this connector.




3. Plug in the correct trailer connector for your vehicle.

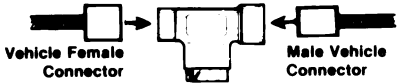

4. Plug the trailer wiring harness that matches your trailer into your trailer light connector.

Trailer Wiring Harness (TC471 shown)

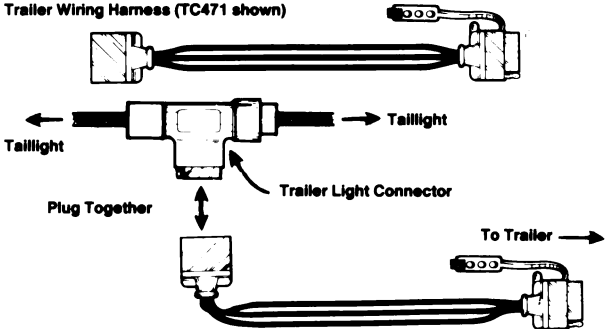

5. Attach the trailer end of the wiring harness to your vehicle, securing it as close as possible to your trailer hitch. Be sure to leave 9" to 12" free for trailer turning flexibility. Use the convenient connector cap to keep out dirt and moisture.
6. Your modular trailer light system installation is now complete.